

BANG & OLUFSEN

B E O L I N K 1 0 0 0

The Beolink 1000 remote control gives access to all the primary functions in a Bang & Olufsen system, including audio and video products and special functions such as light control.

This User's guide gives a general introduction into the use of Beolink 1000 in connection with any compatible Bang & Olufsen audio or video product.

For detailed operating instructions, please refer to the User's guide for the appropriate audio or video system.

- 4 *Beolink 1000*
 - Principles of operation*
- 5 *Daily operations*
 - Using your audio or video system with Beolink 1000*
- 6 *Using other functions*
 - Searching on a video tape*
 - SHIFT functions*
 - Beolink 1000 and BeoLink setup*
 - Light control*
- 8 *Sound and picture*
 - Adjusting sound and picture levels*
- 9 *On-screen menus*
 - Using on-screen menus*
- 10 *Miscl. information*

Principles of operation

The Beolink 1000 remote control integrates remote operation of your Bang & Olufsen products.

Daily operations are carried out directly via the Beolink 1000 by pressing a single button, or by pressing a few buttons in a logical and straightforward sequence.

The more advanced functions are also carried out from the Beolink 1000 remote control but operation of such functions may be guided by on-screen menus on a video product.

You can rest the Beolink remote control on a table, hold it in your hand or hang it on the wall in a specially designed clip (an optional accessory).

Whichever way is most convenient, you will find that the Beolink remote control always responds readily to your instructions.



The Beolink 1000 remote control

Using your audio or video system with Beolink 1000

You can use the Beolink 1000 remote control to switch on any video or audio sources.

Via Beolink 1000, you can search for specific tracks* on your audio or video tapes or on your CD or select program numbers for TV, SAT or RADIO. Alternatively, use the wind buttons to search through audio or video tapes or search through a CD in a *single* CD player.

If you are able to record audio or video sources, you can instruct an audio or videotape recorder to record the program you are currently listening to or watching via Beolink 1000.

When you press STOP once, you stop playback on an audio tape and pause playback on a video tape or a CD. To stop playback entirely on a video tape, you must press STOP again or press the standby button to switch the system to standby.

*Note: To search for tracks on a video tape, you must preset your video system via its *Setup* menu, please refer to the User's guide for the respective system for further instructions.

Note: To switch on a CDV player, press SHIFT then SAT and operate as usual.

Switching on video sources...

Press to switch on to TV

TV

Press to switch on to Satellite

SAT

Press to switch on the video tape recorder

V.TAPE

Switching on audio sources...

Press to switch on the radio

RADIO

Press to start playing a CD

CD

Press to start the audio tape recorder

A.TAPE

Press to start the record player

PHONO

Press to step between program numbers or tracks on audio or video tape or on a CD

▲ or ▼

Use the number keys to select program numbers or tracks

0 through to 9

Press to search backwards on an audio or video tape or on a *single* CD player

◀

Press to search forward on an audio or video tape or on a *single* CD player

▶

To record a current source...

Press to twice to start recording

RECORD
RECORD

Press to pause or stop

STOP

Press to resume playing

PLAY

Press to switch the system to standby

●

| | |
|--|---|
| V.TAPE | Press to start playing a tape |
| GO TO then 2 1 5 | Press to play the tape from a specific counter position for example 2:15 |
| >> or << | While the tape is playing... Press to cue the tape forwards Press to cue the tape backwards |
| STOP | Press to pause the tape |
| | Pressing >> plays the tape in slow motion, pressing << plays the tape backwards in slow motion |

To stop playback entirely...

| | |
|-------------|---------------------------------|
| STOP | Press to stop playback entirely |
| STOP | |

Searching on a Video tape

If you have a Bang & Olufsen video tape recorder, you can use the Beolink 1000 to control its functions.

In addition to regular playback operations, you can search through the tape with a picture on the screen, search through the tape in slow motion or search for specific counter positions, *Time left* or *Time used*.

Please refer to the video tape recorder's own User's guide for further instruction...

With V. TAPE as source...

| | |
|----------------|----------------------------------|
| SHIFT | Press to change between sound |
| PICTURE | tracks available on a video tape |

With TV or SAT as source...

| | |
|--------------|--|
| SHIFT | Press to change between the sound |
| SOUND | or languages available for a programme |

With RADIO as source...

| | |
|--------------|-------------------------------|
| SHIFT | Press to change from FM to AM |
| SOUND | |

With A. TAPE as source...

| | |
|--------------|----------------------------------|
| SHIFT | Press to turn an audio tape over |
| SOUND | |

SHIFT functions

You can use the SHIFT button to call up special functions for both video and audio sources.

You can change between the sound tracks on a video tape, change sound type (e.g. mono or stereo) or language for a program, change between Radio FM and AM band or turn an audio tape over.

Note: If your video system is equipped with a P-in-P module, press SHIFT then PICTURE to move the small inserted picture from corner to corner.

Beolink 1000 and BeoLink setup

If you have a BeoLink setup with audio and video products in different rooms and want to watch a decoded TV programme from your main room system on your link room TV, you must transfer this particular video source from the main room video system to your link room TV.

Note: For further information about BeoLink, please contact your Bang & Olufsen dealer.

Note: If you have an integrated audio/video system, you can use the AV button to shift the sound control from the audio to the video system and vice versa.

Press to transfer a video source from a main room system to link room system

LINK

To transfer TV...

then

TV

Then operate the sources as usual via your Beolink 1000...

Light control

If you have a Bang & Olufsen light Control or several such light controls, you can control most household lights via your Beolink 1000. You can switch an individual lamp or several lamps on or off, adjust the light intensity or programme light settings for a room.

Press to be able to control the light

LIGHT

then

▲

or

▼

or

0

through

9

Use the number keys to select the light picture you want

Adjust volume at any time...



Press to raise the volume



Press to lower the volume



Press to mute the speakers
Press again to demute the speakers

Adjusting sound levels...



Press repeatedly to access volume, bass, treble, and loudness

A cue appears on-screen or on the display which informs you of the level you can now adjust...



Press to raise the level

or



Press to lower the level

then



Press to store the sound levels



Adjusting picture levels...



Press repeatedly to access brilliance, color and contrast

A cue appears on-screen or on the display which informs you of the level you can now adjust...



Press to raise the level

or



Press to lower the level

then



Press to store the picture levels



Adjusting sound and picture levels

On your video system, you can adjust sound as well as picture levels via Beolink 1000.

You can adjust sound levels such as volume, bass, treble and loudness for your audio or video system. For your video system, you can adjust the picture levels brilliance, color and contrast, in some instances additional levels may be available*.

For further information about sound and picture adjustment, please refer to the respective User's guides for your audio or video systems...

*Note: If your TV video system is mounted on a motorised stand, pressing PICTURE once will display *Stand* instead of *Brilliance* on-screen and access a function which turns your TV. So in order to adjust brilliance, color and contrast, you have to press PICTURE two, three, and four times respectively.

Note: If you wish to reset your sound and picture levels to their preset levels, press SHIFT, then MUTE to do so.

Using on-screen menus

Programming of your Bang & Olufsen video system and certain TV and VCR functions are operated via on-screen menus that you call up on the TV.

These functions are all described in the User's guide and in the Setting-up guide for your Bang & Olufsen video system.

Press to call up the main menu for the source you selected



The main menu appears...

Press until the item/menu you want is highlighted



or



then



Press to call up the menu

The menu in question appears...

Press to move the cursor from item to item in the menu



or



then



or



Press to reveal other options for the highlighted item

Or

Use the number keys to fill in information for the highlighted item



through



then



Press to store the information you have entered

Alternatively...

Press at any time to return to the previous menu without storing the information you have entered



Press a source button e.g. V.TAPE to remove the menus from the screen



International Guarantee

This Bang & Olufsen product carries a guarantee against defects in workmanship and materials. The terms of the guarantee apply to the country of purchase but will be met by authorized Bang & Olufsen dealers in other countries.

The guarantee period applying to the country of purchase takes priority over guarantee periods applying in other countries, even where differences exist. In order to obtain service under this guarantee, a certificate stating the following information is required:

- Name of product and type number
- Serial number
- Date of purchase
- Guarantee period
- Dealer's or supplier's signature

If you intend to use the product in a country other than that in which it was bought, it may be necessary for you to have the product modified to suit the transmission system, or mains supply etc., used in the country you are moving to. We therefore recommend that you contact your Bang & Olufsen dealer before moving to another country. No costs incurred in this connection will be covered under the terms of the guarantee.

Environmental information

This Bang & Olufsen product was delivered in a packing made to protect and transport the product safely from the factory to your home. In the design of our packing, we use the most conserving and recyclable materials known today, and we constantly work to reduce any negative side effects our packing material may have on the environment. We observe any progress with great interest.

Corrugated cardboard Made of at least 45% recycled material. The printing ink contains no heavy metals, and the box is reusable for paper production.

Foamed plastic parts Made without use of injurious inert gasses. Can be recycled or incinerated, liberating carbon dioxide and water. Usable for soil improvement in granular form.

Plastic bags All plastic parts are free of PVC and can be recycled or incinerated, liberating carbon dioxide and water.

Batteries We urge you to show consideration when changing the batteries in your remote control terminal. Used-up batteries should be disposed of and kept separately.

Date purchased

Contact person

Dealer

Telephone

Address

Beolink 1000 remote control serial number

Dear Customer,

Your needs as the user of our products are always given careful consideration during the design and development process, and we strive to make our products easy and comfortable to operate.

We therefore hope that you will take time to drop us a line, telling us about your experiences with your Bang & Olufsen system. Anything which you consider important – positive or negative – may help us in our constant efforts to refine our products.

Thank you!

Please write to:

Customer information

Bang & Olufsen als

DK-7600 Struer

Denmark

